

*Electra Elite® Wireless*



*The PSII Wireless User Guide*

**NEC**

# Charging the Battery

To recharge a PSII (with the battery pack inside) place phone here.

To recharge a spare battery pack, place it here.


**CAUTION:** The caution label always faces front.

**NOTE:** When both the PSII and the spare battery are in the charger, the spare battery charges first, followed by the PSII. Red indicates charging in process, green indicates charging is complete.

Battery lamp indicates the charging status of the spare battery.

PS lamp indicates the charging status of the battery inside the PSII.

AC power adapter is supplied with the PSII charger.

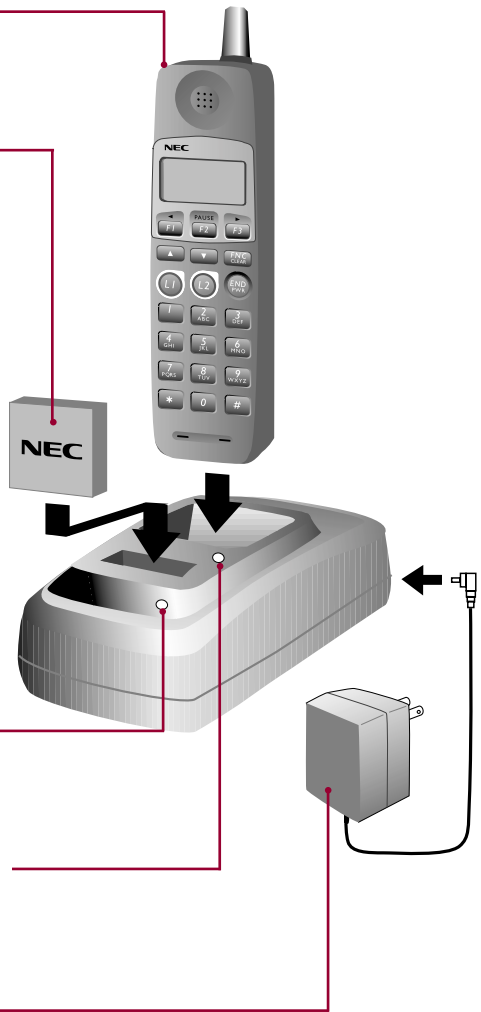

# *Table of Contents*

## ***PAGES 2 & 3***

Displays and Keys  
The PSII Display

## ***PAGES 4 & 5***

Basic Operation  
PSII Features

## ***PAGES 6 & 7***

Entering Names In The  
Directory  
Directory Dialing  
Speed Dial Numbers  
Last Number Redial

## ***PAGES 8 & 9***

Call Forwarding  
Transferring a Call  
Calling Party Number  
Place a Call On Hold  
Set Call Park  
Retrieve a Parked Call  
Initiate a Conference call  
Adjust Call Volume

## ***PAGES 10 & 11***

PSII Functions  
Program/Erase Softkeys  
Softkey Chart

## ***PAGES 12 & 13***

Program/Erase Message Keys  
Access Message Keys  
Program/Erase VM Speed Dial  
Speaker Ring  
Keypad Lock  
Automatic Answer  
Headset Ring

## ***PAGES 14 & 15***

Number Display  
Key Click  
Key Light  
LED Flash  
Station/Line Ring  
Service Alarm  
Confirmation Tone

## ***PAGES 16 & 17***

Answer Tone  
Modem Dial  
Call Forwarding Busy  
Call Forwarding Doesn't Answer  
Call Forwarding All  
Power On Message

## ***PAGES 18 & 19***

Password  
Protect Directory  
Default Set  
Reset All

## ***INSIDE BACK COVER***

Accessories

# Displays and Keys

**Fixed, Snub-Nose Antenna**  
No need to pull out or adjust.

**LED Ring Indicator**  
Red light indicates incoming call.


**LCD Display**

**Headset Jack**

**Scroll Keys**  
Press while in the standby mode to access additional feature levels. Press and hold for more than two seconds during a call to increase or lower volume receiver.

**Battery Compartment**  
(in back)

**Programming Interface**  
(on bottom)

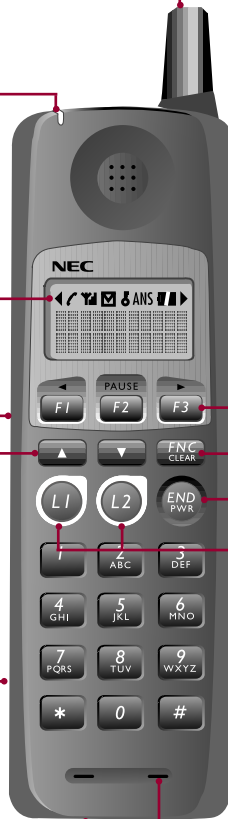

**Feature Keys**  
Control specific features of phone.

**FNC/CLEAR**  
(Function Key)  
Press to activate numerous telephone functions. Press to clear entry.


**END/PWR**  
(End Power On/Off Key) Push once to end a call. Press for more than two seconds to turn power on and off.

**L1 Button**  
Press to originate or answer a call.

**L2 Button**  
Not available for Electra Elite.

**Microphone**

# The PSII Display

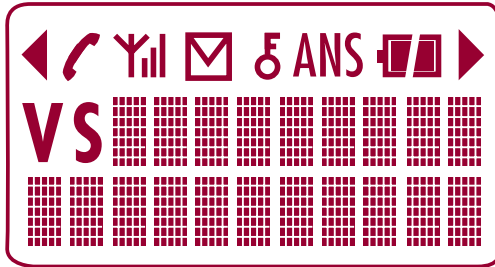

To view digit overflowing the display to the left or right.



Off-hook, indicating the PSII is off-hook.



Signal strength, indicating strength or weakness of signal being received. The antenna picture display illuminates as the phone powers up, indicating that the phone can make a call.



Envelope indicates user has at least one new voice mail message.



Keylock status illuminates when Keylock is on.

## ANS

Illuminated ANS indicates that Auto Answer is active.



Battery indicates charge level. The line indicates weak charge. Battery without line indicates strong charge.

## V

Illuminated V indicates that incoming call vibration notification is active.

## S

Illuminated S indicates that incoming ring volume is silent.

# *Basic Operation*

## *TO TURN THE PHONE ON/OFF*

- Press the **END/PWR** key and hold for more than two seconds to turn on.
  - \*The PSII will display the start-up greeting: **Please Wait**
  - \***Yil** indicates communication is available.
  - \***NO SERVICE** indicates your PSII is out of the service area. No service indication may also indicate the number of visitors limit has been exceeded when roaming.
- Press the **END/PWR** key and hold for more than two seconds to turn off.

## *TO ORIGINATE A CALL*

- Enter the telephone number.
- Press **L1**.
- OR
- Press **L1**. If number display is on, the PSII will momentarily display the extension number of the selected line.
- Enter the telephone number.

## *TO RECEIVE A CALL*

- During ringing, press **L1**.
- Begin speaking into the microphone.

## *TO ADJUST RING VOLUME*

- Press **FNC/CLEAR**.
- Press **F2** to turn off, **F3** to turn up or **F1** to turn down.
- Press selection repeatedly until desired setting or **SILENCE** appears in the display.
- Press **L1** to enter new volume.
  - \*If volume is turned off, the silent ring icon (**S**) will appear in the display.

## *TO SELECT INCOMING CALL VIBRATION NOTIFICATION*

- Press **FNC/CLEAR**.
- Enter **06**.
- Press **F1** to turn on or **F3** to turn off.
- Press **L1** to enter vibration setting.
  - \*The incoming call vibration notification indicator (**V**) will appear in the display.

# Features

Elite Wireless supports 11 preset keys, 10 programmable softkeys and 6 programmable message softkeys. All can be accessed by pressing the **F1**, **F2** or **F3** feature keys then pressing the up and down scroll keys as needed to move between levels. Preset features include:

- DIR**                    Directory
- SPD**                  Speed Dialing
- LNR**                  Last Number Redial
- CFW**                  Call Forwarding
- TRF**                  Call Transfer
- CPN**                  Calling Party Number
- HLD**                  Hold
- VOL**                  Call Volume Control
- ◀ or ▶                Scroll Display
- PAUSE**              Inserts pause in dialing sequence
- S1 – S9**              Programmable softkeys
- M1 – M6**            Programmable message keys
- VM**                    Voicemail
- TM**                    Text Messaging

*NOTE: Text Messaging is not supported on Electra Elite.*

	F1	F2	F3
Level 0	←	Pause	→
Level 1	DIR	SPD	LNR
Level 2	CPN	CFW	
Level 3	HLD	TRF	VOL
Level 4	S1	S2	S3
Level 5	S4	S5	S6
Level 6	S7	S8	S9
Level 7	M1	M2	M3
Level 8	M4	M5	M6
Level 9	TM		VM

## TO ENTER NAMES IN THE DIRECTORY

- Press **FNC/CLEAR**.
- Enter **03**.
- Press **F1**.
- Key in the name using the following chart:

Times	1 2 3 4 5	1 2 3 4 5
Key	Upper	Lower
1	. , 1	. , 1
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	SP - Ø	SP - Ø
*	* (	* (
#	# )	# )
PAUSE	Change to lower case	Change to upper case
FNC/Clear	Delete entry	Delete entry

- When the name is complete, Press **L1**.
- Enter the number.  
\*If a pause is required (after trunk access 9 for an outside line) press **F2** to insert a pause.
- Press **L1** to enter directory.
- Press **L1** again to confirm.
- Press **END/PWR** to exit.



## ***TO USE DIRECTORY DIALING***

- While in standby mode, press **F1**.
- To search the directory in alphabetical order, press **SCROLL DOWN**.  
\*You may push **SCROLL UP** to scan in reverse order.
- To search the directory by name, key in the first few letters of the person's last name then push the down key until the desired selection appears.
- Once you've found the name, press **L1** to dial the number.
- To make another selection, press **END/PWR** then repeat above steps.

## ***TO ENTER SPEED DIAL NUMBERS***

- Press **FNC/CLEAR**.
- Enter **04**.
- Press **F1**.
- Enter your speed dial number **01** through **20**.
- Press **L1** to enter.
- Key in the name using the chart on page 6.
- Press **L1** to enter name.
- Key in the digits for that number.
- Press **L1** to enter digits.
- Press **L1** again to confirm.
- Press **END/PWR** to exit.

*NOTE: Do not remove the battery until at least one minute has elapsed since entering Directory or Speed Dial numbers.*

## ***TO USE SPEED DIAL NUMBERS***

- While in stand-by mode, press **F2**.
- Key in the speed dial number **01** through **20**.
- Press **L1** to dial the number or press one of the **SCROLL** keys to scroll through the list of speed dial entries.

## ***TO ACCESS LAST NUMBER REDIAL***

- While the phone is in standby mode, press **F3**.
- The **PSII** will display the last number dialed.
- If that is the number you wish to dial, press **L1**.
- If that is not the number you wish to dial, press **SCROLL DOWN** to scroll through the last five numbers dialed.

*NOTE: The **PSII** retains the last five numbers you have called.*

## ***To Use Call Forwarding***

*NOTE: Before using this feature, call forward access codes need to be established. Refer to Functions to set access codes.*

- While the phone is in standby mode, press **SCROLL DOWN**.  
\*If access codes are not established, display will show **CFW Empty**.

### ***CALL FORWARD BUSY***

- Press **F2** to select call forwarding.
- Press **F1** to set the extension to forward busy calls.
- Press **L1**.
- Dial the destination number to forward the calls or press **SCROLL DOWN** key for Call Forward D/A.

### ***CALL FORWARD D/A***

- Press **F2** to select call forwarding.
- Press **SCROLL DOWN**.
- Press **F1** to set the extension to forward calls which are not answered.
- Press **L1**.
- Dial the destination number to forward the calls or press **SCROLL DOWN** key for Call Forward All.

### ***CALL FORWARD ALL***

- Press **F2** to select call forwarding.
- Press **SCROLL DOWN** twice.
- Press **F1** to set the extension to forward all calls.
- Press **L1**.
- Dial the destination number to forward the calls or press **SCROLL DOWN** key for Call Forward N/R.

### ***CALL FORWARD N/R***

*NOTE 1: Call forward N/R is not supported on Electra Elite. Press **SCROLL DOWN** key for Call Forward Busy.*

*NOTE 2: One default access code is provided for Call Forward Busy / Call Forward No Answer. Check with your system administrator for additional access codes.*

## ***To Transfer a Call***

- With a call in progress, press **F2**.  
\*You will hear a special dial tone.
- Key in the telephone number you wish to transfer the call to.
- Press **END/PWR** to complete the transfer. Your PSII will return to the standby mode.

## ***TO USE CALLING PARTY NUMBER***

The PSII retains the numbers of the last five calls received.

- While the phone is in the standby mode, press the **SCROLL DOWN** key.
- Press **F1**. The PSII displays the number of the person who called you most recently.
- Press **SCROLL DOWN** repeatedly to scroll through the numbers of the last five people who called you.
- When you find the number you wish to call, press **L1**.  
\*If you wish to call someone who called you from outside the office, enter the access code (for example “9”) before accessing **CPN**.

## ***TO PLACE A CALL ON HOLD***

- With a call in progress, press **F1**.  
\*You will hear internal dial tone.
- Press **L1** to retrieve the call from hold.

## ***TO SET CALL PARK***

- With call in progress, press **F2**.
- Dial the Call Park Set access code 4\* and choose the park location (0-9).
- Press **END/PWR** to complete the transfer.

## ***TO RETRIEVE A PARKED CALL***

- Press **L1**.
- Dial the Call Park Retrieve access code 4# and choose the park location (0-9).
- Talk with party.

## ***TO INITIATE A CONFERENCE CALL***

- With a call in progress, press **F2**.  
\*The party is placed on hold.
- Dial an internal station and announce conference.
- Press **L1** to complete the conference and talk with both parties.

*NOTE: Repeat above procedure to add a fourth party. No more than one outside party can participate in a conference.*

## ***TO ADJUST CALL VOLUME***

- With call in progress, press **F3** to adjust call volume.
- Press **F1** to lower and **F3** to increase call volume.

# Functions

<b>Digits</b>				
<b>Dialed</b>	<b>Function</b>	<b>F1</b>	<b>F2</b>	<b>F3</b>
01	Ring Volume	DWN	OFF	UP
02	Speaker Ring	<b>ON</b>		OFF
03	Directory	ADD	CHG	DEL
04	Speed Dial	ADD	CHG	DEL
05	Key Lock	ON		<b>OFF</b>
06	Vibration	ON		<b>OFF</b>
07*	Auto Answer	ON		<b>OFF</b>
08	Headset Ring	ON	<b>AUT</b>	OFF
09	Number Display	ON		<b>OFF</b>
10	Key Click	<b>ON</b>		OFF
11	Key Light	<b>ON</b>		OFF
12	LED Flash	<b>ON</b>		OFF
13*	Trunk Ring	<<		>> Default is 2
14*	Station Ring	<<		>> Default is 1
15	Service Alarm	<b>ON</b>		OFF
16	Confirmation Tone	<b>ON</b>		OFF
17	Answer Tone	<b>ON</b>		OFF
18	Modem Dial	ON		<b>OFF</b>
19	Set Softkey	SET		RST
20	CFW Busy	SET		RST
21	CFW D/A	SET		RST
22	CFW All	SET		RST
23**	CFW N/R	SET		RST
24	Message Keys	SET		RST
25	Voicemail	SET		RST
26**	Message Storage	HNL	NL	---
27**	Protect TMM	SET		<b>RST</b>
28	Power On Message	SET		<b>RST</b>
29	Password	SET		<b>RST</b>
30	Protect Directory	ON		<b>OFF</b>
31	Default Set	SET		
32	Reset All	SET		

*NOTE: All defaults are in bold type.*

\*L1 only supported for Elite. If L2 is selected, an error tone is heard.

\*\*Not available for Elite.

## TO PROGRAM/ERASE SOFTKEYS

- Press **FNC/CLEAR**.
- Enter 19.
- Press **F1** to Program or **F3** to Reset.
- Press the number of Softkey to Program/Erase (1-9).
- Press **L1** to confirm.
- Press **L1** again to confirm Program/Erase or **END/PWR** to cancel.
- To Program enter up to 3 characters or numbers to display for Softkey.
- Press **L1** to confirm.
- You may need to precede the access code or extension with a hook-flash. If so, select **F1**. Otherwise select **F3**.
- Enter up to 40 numbers to dial or access codes to initiate.
- Press **L1** to enter.
- Press **L1** again to confirm.

## ACCESS SOFTKEYS

For this example, let's assume that a PSII's Softkey codes have been programmed as follows:

Softkey#	Name	Number
S1	TIM	100
S2	PRK	H4*
S3	RET	4#
S4	911	9911
S5	No entry	No entry
S6	No entry	No entry
S7	No entry	No entry
S8	No entry	No entry
S9	MOM	916065551212

*NOTE: The "H" in S2's number refers to a hook-flash sent to the switch used for off-book dialing.*

### EXAMPLE: TO USE SOFTKEY 1.

- With the PSII in a stand-by mode, press the **Scroll Down** key three times.
- Press **F1**.
- The PSII displays the extension.
- Press **L1** to call. The number in the display disappears, then reappears digit by digit from the right end of the display as the PSII dials the number.
- The call number blinks. The PSII automatically shifts to talk mode.

## *TO PROGRAM/ERASE MESSAGE KEYS*

- Press **FNC/CLEAR**.
- Enter 24.
- Press **F1** to Program or **F3** to Reset.
- Enter the number of Message Key to Program/Erase (1-6).
- Press **L1** to confirm.
- Press **L1** again to confirm Program/Erase or **END/PWR** to cancel.
- Enter up to 3 characters or numbers to display for Message Key.
- Press **L1** to confirm.
- You may need to precede the access code or extension with a hook-flash. If so, select **F1**. Otherwise, select **F3**.
- Enter up to 40 numbers to dial or access codes to initiate.
- Press **L1** to enter.
- Press **L1** again to confirm.

## *TO ACCESS MESSAGE KEYS*

- While in standby mode, press the **Scroll Up** key 4 times for key 1-3 or 3 times for key 4-6.
- Press **F1** for Message Key 1 or 4, **F2** for Message Key 2 or 5, or **F3** for Message Key 3 or 6.
- Press **L1** to call.

## *TO PROGRAM/ERASE VM SPEED DIAL*

- Press **FNC/CLEAR**.
- Enter 25 for Voicemail.
- Press **F1** to Program or **F3** to Reset.
- To Program, enter your Voicemail extension number then press **L1**. Or to Erase, press **L1**.
- Press **L1** again to confirm.

## *SPEAKER RING*

Allows you to disable incoming calls from ringing while on a call.

### *TO CHANGE SPEAKER RING:*

- Press **FNC/CLEAR**.
- Enter 02.
- Press **F3** to disable speaker ring or press **F1** to enable speaker ring.
- Press **L1** to enter.

## KEYPAD LOCK

Allows you to carry your phone without fear that buttons may be inadvertently pushed, activating the phone.

### TO LOCK KEYPAD:

- Press FNC/CLEAR.
- Enter 05.
- Press F1 to lock keys.
- Press L1 to enter. The keylock status icon (🔒) will appear on the LCD display.

*NOTE: After locking the keypad keys, you can still receive incoming calls.*

### TO UNLOCK KEYPAD:

- Press FNC/CLEAR and hold it down for more than two seconds.

## AUTOMATIC ANSWER

Enables you to receive calls without first having to press the L1 button.

*NOTE: Automatic Answer is not active when L1 is busy.*

### TO TURN ON/OFF AUTOMATIC ANSWER:

- Press the FNC/CLEAR button.
- Enter 07.
- Press F1 to select line.
- Press F1 to turn on or F3 to turn off.
- Dial the number of seconds you want the phone to ring (0 to 20) before the call is automatically answered. Or, press L1 to confirm off.
- Press L1 to enter.

\*The Auto Answer icon (ANS) will appear on the LCD display.

*NOTE: L1 only supported for Elite. If L2 is selected, an error tone is heard.*

## HEADSET RING

When using a headset, allows phone to ring through to headset.

### TO SELECT HEADSET RING MODE:

- Press FNC/CLEAR.
- Enter 08.
- Press F1 to turn on, F3 to turn off, or F2 to activate automatic mode.
- Press L1 to confirm.

*NOTE: Automatic headset ring causes your phone to ring automatically in the headset whenever a headset is plugged in.*

## *NUMBER DISPLAY*

Display PSII extension when L1 is pressed.

### *TO TURN NUMBER DISPLAY ON/OFF:*

- Press FNC/CLEAR.
- Enter 09.
- Press F1 to enable or F3 to disable Number Display.
- Press L1 to confirm.

## *KEY CLICK*

Enables you to hear a beep as you press each key.

### *TO TURN ON/OFF KEY CLICK:*

- Press FNC/CLEAR.
- Enter 10.
- Press F1 to turn on or F3 to turn off Key Click.
- Press L1 to confirm.

## *KEY LIGHT*

Controls the back-lit display.

### *TO TURN KEY LIGHT ON/OFF:*

- Press FNC/CLEAR.
- Enter 11.
- Press F1 to turn on or F3 to turn off Key Light.
- Press L1 to confirm.

## *LED FLASH*

Controls LED Ring Indicator. Red Light indicates incoming call.

### *TO TURN ON/OFF LED FLASH:*

- Press FNC/CLEAR.
- Enter 12.
- Press F1 to turn on or F3 to turn off LED Flash.
- Press L1 to confirm.



## STATION/LINE RING

Allows you to assign ring patterns that tell users whether an incoming call is from an internal or external source.

### TO CHANGE RING PATTERNS:

- Press FNC/CLEAR.
- Enter 14 for Station or 13 for Line.
- Press F1 to select line.
- Press ◀ or ▶ keys to select a different Station/Line Ring pattern.
- Press L1 to confirm.

*NOTE 1: The default Station Ring pattern is 1. The default Line Ring pattern is 2.*

*NOTE 2: L1 only supported for Elite. If L2 is selected, an error tone is heard.*

## SERVICE ALARM

Enables you to know when you are in an area without service, if the battery is running low or if you are approaching the eight-hour usage time-limit.

*NOTE: By FCC regulation, a single conversation is limited to eight hours. Of course, you can always hang up and redial to continue your conversation if necessary.*

### TO TURN ON/OFF SERVICE ALARM:

- Press FNC/CLEAR.
- Enter 15.
- Press F1 to turn on or F3 to turn off Service Alarm.
- Press L1 to confirm.

## CONFIRMATION TONE

Enables you to hear a tone that lets you know you have made an error or confirms that you entered information properly.

### TO TURN ON/OFF CONFIRMATION TONE:

- Press FNC/CLEAR.
- Enter 16.
- Press F1 to turn on or F3 to turn off Confirmation Tone.
- Press L1 to confirm.

## **ANSWER TONE**

Enables you to hear a warning tone for an incoming call before Auto Answer.

### **TO TURN ON/OFF ANSWER TONE:**

- Press **FNC/CLEAR**.
- Enter 17.
- Press **F1** to turn on or **F3** to turn off Answer Tone.
- Press **L1** to confirm.

## **MODEM DIAL**

*NOTE: The first digit sent by the modem will set D<sup>stm</sup> PSII to off-hook and start dialed digits. Some modems/applications may not work properly.*

### **TO TURN ON/OFF MODEM DIAL:**

- Press **FNC/CLEAR**.
- Enter 18.
- Press **F1** to turn on or **F3** to turn off Modem Dial.
- Press **L1** to confirm.

## **CALL FORWARDING BUSY**

Enables you to set the access code which is used to establish call forwarding when your line is busy.

*NOTE: Check with your system administrator for the list of access codes.*

### **TO SET THE CALL FORWARDING BUSY ACCESS CODES:**

- Press **FNC/CLEAR**.
- Enter 20.
- Press **F1** for Set Code or **F3** for Cancel Code.
- Key in the access code to establish call forwarding when busy.  
Example: 43 = Call Forward Busy Set. 44=Call Forward Busy Cancel.
- Press **L1** to enter.
- Press **L1** to confirm.

## CALL FORWARDING DOESN'T ANSWER

Enables you to set the access code which is used to establish Call Forwarding when you do not answer the phone.

*NOTE: Check with your system administrator for the list of access codes.*

### TO SET THE CALL FORWARDING DOESN'T ANSWER ACCESS CODES:

- Press **FNC/CLEAR**.
- Enter 21.
- Press **F1** for Set Code or **F3** for Cancel Code.
- Key in the access code to establish call forwarding when call is not answered.  
Example: 43 = Call Forward Doesn't Answer Set. 44 = Call Forward Doesn't Answer Cancel.
- Press **L1** to enter.
- Press **L1** to confirm.

## CALL FORWARDING ALL

To set the access code to establish Call Forwarding for All Calls.

*NOTE: Check with your system administrator for the list of access codes.*

### TO SET THE CALL FORWARDING ALL ACCESS CODES:

- Press **FNC/CLEAR**.
- Enter 22.
- Press **F1** for Set Code or **F3** for Cancel Code.
- Key in the access code to establish Call Forwarding for All Calls.  
Example: 41 = Call Forward-All Set. 42 = Call Forward-All Cancel.
- Press **L1** to enter.
- Press **L1** to confirm.

## POWER ON MESSAGE

Allows you to set a message that displays as the PSII powers up.

### TO SET/RESET A POWER ON MESSAGE:

- Press **FNC/CLEAR**.
- Enter 28.
- Press **F1** to Set or **F3** to Reset.
- Press **L1** to enter.

*NOTE 1: Use the chart on page 6 to key in each letter that makes up the Power On Message. The Power On Message can have a maximum of 22 characters.*

*NOTE 2: You may wish to enter your name and phone number as the Power On message.*

*NOTE 3: When power on message is reset the default message ("Please Wait") will display.*

## ***PASSWORD***

Enables you to set a password. Passwords are 4 characters long. The default password is 0000.

### ***TO SET A PASSWORD:***

- Press **FNC/CLEAR**.
- Enter 29.
- Press **F1** to set a password.
- Enter old password.
- Press **L1** to confirm old password.
- Key in new password.
- Press **L1** to confirm the password.
- Key in new password a second time.
- Press **L1** to confirm.

### ***TO CANCEL A PASSWORD:***

- Press **FNC/CLEAR**.
- Enter 29.
- Press **F3**.
- Key in current password.
- Press **L1** to confirm.

\*The password is now reset to: 0000.

## ***PROTECT DIRECTORY***

Enables you to protect the directory so even if you use Reset All, your directory will not be erased. This will also prevent all access to the directory.

### ***TO TURN ON/OFF PROTECT DIRECTORY:***

- Press **FNC/CLEAR**.
- Enter 30.
- Press **F1** to turn on or **F3** to turn off protection.
- Key in password.
- Press **L1** to confirm.

## ***DEFAULT SET***

Allows you to reset your PSII to all the factory set defaults.

- Press **FNC/CLEAR**.
- Enter **31**.
- Press **F1**.
- Press **L1** to confirm.

\*All defaults are listed in bold type on the function chart on page 10.

## ***RESET ALL***

A maintenance function to reset all settings to what they were when the PSII left the factory.

- Press **FNC/CLEAR**.
- Enter **32**.
- Press **F1**.
- Key in Password.
- Press **L1** to enter.
- Press **L1** to accept.
- Press **L1** again to confirm.

# *NOTES*

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## **LEATHER CARRYING CASE WITH SWIVEL CLIP**

A glove fit maintains the feel of the handset. It also provides a quick release belt clip attachment with a 360 degree swivel clip, allowing the handset to move out of the way as you move and sit. Spare swivel clips are available.

## **LEATHER CARRYING CASE WITH STANDARD CLIP**

Same case as above with a standard belt clip.

## **WEATHER-PROOF CASE**

A weather-proof sealed leather case for outdoor use.

## **SPARE BATTERY**

A unique lithium battery provides long battery life (up to 500 hours on standby). A spare battery can be charged and ready for those “on-the-go.”

## **TWO HEADSET OPTIONS**

The classic banded headset with microphone extension, is typically used in cases of prolonged active use (e.g. customer service agent). An ear bud type with an in-line microphone is designed for occasional use or when concealment is desired (e.g. hotel security).

## **NECKLACE**

Adjustable necklace (23” to 42”) to provide security from dropping the handset while, for example, carrying it in a lab coat pocket.

## **MODEM CABLE**

Connects to your laptop modem to provide “computing on-the-go.” The cable uses the headset jack of the Dterm PSII and supports speeds up to 19.2kbps.

## **PC SOFTWARE**

Windows-based software that allows you to copy 100-name directory entries and 20-name speed dial entries from your desktop organizer to the PSII. This software can also “back up” your phone to protect your Directory and Speed Dial entries from loss.

*NOTE: Two versions available: Personal Assistant or Group Assistant.*

## **GANG CHARGER**

Comes with a single AC power adapter supporting up to 8 PSII charging units.

Electra Elite is a registered trademark  
of NEC America, Inc.

Dterm is a registered trademark of  
NEC Corporation.

©2001 NEC America, Inc. The material  
contained herein is subject to change  
without prior notice at the sole discretion  
of NEC America, Inc.

**NEC**

Issue #1 4/01  
For more information contact:  
NEC America, Inc.  
CPE Group  
6555 N. State Highway 161  
Irving, Texas 75039  
1 800 TEAM NEC  
[www.cng.nec.com](http://www.cng.nec.com)

750422

