

# 1. Call Indicator lamp

Easier to see which phone is ringing, used for message wait as well.

## 2. Alphanumeric display

Assists the caller by providing visual information relating to the calling number and party's name, number dialed, call status, feature activation and user prompts, as well as a clock and timer.

## 3. Line/feature access keys

8/16/24 keys/lamps (dual colour) can be used in any combination for the line (extension or exchange) selection, speed dialing or features you can access. Example features:

- Call Forward.
- Save and Repeat.
- Message Reminder.
- Call Back.

- Voice Call.
- Call Pick Up.

# 4. Recall button

Press to terminate the established call and reseize internal dial tone.

# 5. Function key

Used to activate terminal setup functions and to program One-Touch Speed Dial/Feature Keys. Terminal setup functions include:

- Microphone on/off : FNC+1
- Receiver volume : FNC+2
- Ringer tone : FNC+3 (keep pressing for tone 1, 2, 3 or 4.)
- Hands-free on/off : FNC+5 (on) FNC+6 (off)

## 6. Conference button

To establish a conference call. A red indicator provides visual confirmation that a conference is in session. See instructions below.

## 7. Last number redial key

Used to activate last number called and speed dialing. (Lift handset and press LNR/SPD to select.

Then press # to dial the selected number.)

# 8. Speaker button

To control the built-in speaker for handsfree dialling and monitoring. Full handsfree dialling operation is a standard feature. A red indicator provides visual confirmation that the speaker is on.

## 9. Answer button

When the light on this key is lit, press to answer a waiting call.

## 10. Transfer button

To transfer call, or make a second call.

## **11. Hold button**

To place a call on hold. Note: Press twice to place a call on exclusive hold (no-one else can pick up.) To retrieve the held call lift the handset and press the flashing line. You can also put a call on hold then make another call. You can swap between the two calls by pressing call hold, or hang up on second call and original will ring back.

## **12. Volume control**

To control volume of handset, ringer, display contrast.

- LCD Contrast: Press the "up and down" keys whilst idle.
- Speaker/Receiver Volume: Press "up and down" keys during conversation.
- Ringer Volume: Press "up and down" keys during ringing.

## 13. Microphone

## 14. Microphone Lamp

## 15. User Programmable Keys

12/20 keys can be used in any combination for speed dial, Direct Station Select (DSS) or feature access.

To program Speed Calling:

- Press FNC button.
- Press desired Speed Call Button.
- Enter telephone number or feature code.
- Press FNC again to save.
- To dial number in memory:
  - Press desired Speed Call Button

To verify:

- Press FNC button.
- Press desired Speed Call Button.

#### Call Forward All

Forwards all calls immediately.

SET

- Lift handset.
- Press FWD ALL or dial "\*1"
- Dial extension number your calls are to be forwarded to.

CANCEL

- Lift handset.
- Press FWD ALL or dial "#1"

#### Call Forward No Answer

Forwards only after 4-6 rings.

SET

- Lift handset.
- Press FWD NANS or dial "\*2"
- Dial extension number your calls are to be forwarded to.

CANCEL

ATEL Communications, Inc.

- Lift handset.
- Press FWD NANS or dial "#2"

### **Call Forward Busy**

Forwards only when your extension is busy.

SET

- Lift handset.
- Press FWD BSY or dial "\*3"
- Dial extension number your calls are to be forwarded to.

CANCEL

- Lift handset.
- Press FWD BSY or dial "#3"

#### Save and Repeat

To Save

- Lift handset
- Dial desired telephone number.
- Press S & R.

To Repeat

- Lift handset.
- Press S & R and number saved is redialled.

#### Message (D/term only)

To Leave a Message

- Lift handset and dial extension.
- Receive no answer or busy signal.
- Press MSG.
- To Display Message.
  - Press MSG.
  - Re-press MSG to display additional messages.

To Respond

- While displaying additional messages press SPKR.
- Press MSG to dial extension which left message.
- Message erased.

To Cancel

- Press MSG to display desired message.
- Dial # while message on display.

## Call Back

If you dial a busy extension:

- Press CALL BACK or dial \*0
- Hang up.
- You may originate or receive calls during this waiting period.
- When both extensions are free, your phome will ring.
- Lift handset and the other extension will ring.

ATEL Communications, Inc. www.atelcommunications.com

#### Cancel

- Lift handset.
- Press CALL BACK or dial #0.

#### Voice Call (D/term only)

To speak over the intercom to other DTERM telephones only.

- Dial extension.
- Press VOICE button.
- Speak over intercom.
- Replace handset to disconnect

## Group Call Pick Up

To answer another ringing extension in your group:

• Lift handset and press PICK UP or dial \*\*

### Direct Call Pick Up

To answer a specific extension in any area:

• Lift handset and dial ## plus extension number of ringing phone.

#### **Conference Call**

To establish a 3 way conversation.

- Pick up handset and dial first number required
- Whilst on the call, press Transfer (TRF) button
- Caller will be placed on hold
- Dial extension number or external number
- When called answered by third party, press CNF to establish a 3 way conversation.

Note: Any party may exit conference by hanging up